
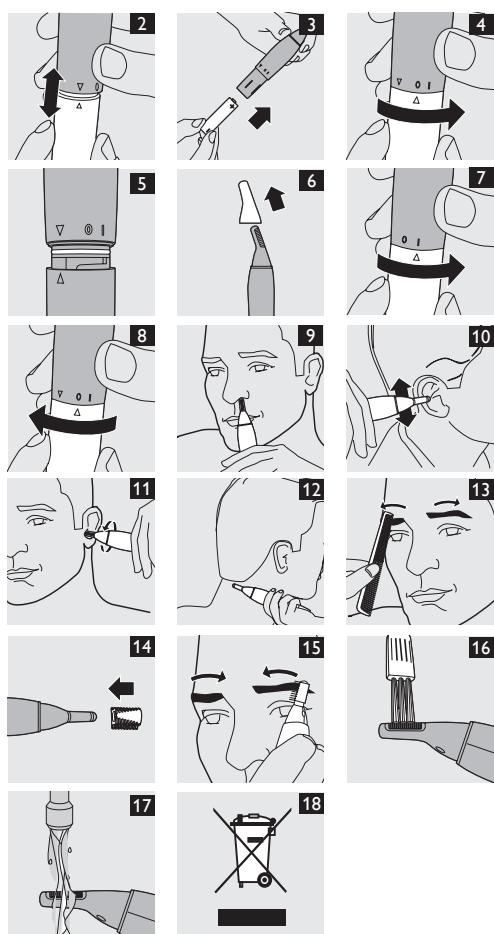


NT9110

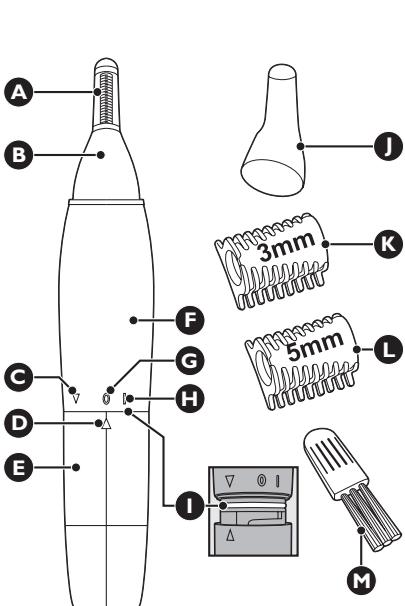

PHILIPS

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

General description (Fig. 1)

- A** Cutting element
- B** Trimming head
- C** ▼ = 'Open' indication
- D** Setting indicator
- E** Battery compartment cover
- F** Motor unit
- G** 0 = 'Off' indication
- H** I = 'On' indication
- I** Sealing ring
- J** Protection cap
- K** Short eyebrow comb (3mm/0.12in)
- L** Long eyebrow comb (5mm/0.2in)
- M** Brush

Important

Read this user manual carefully before you use the appliance and save it for future reference.

Warning

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

Caution

- This appliance can only be operated on a battery.
- Do not use the appliance when the cutting element or the appliance itself is damaged or broken, as this may cause injury.
- Use and store the appliance at a temperature between 15°C and 35°C.
- This appliance is only intended for trimming nose hair, ear hair, eyebrows and neck hair. Do not use it for another purpose.
- Remove the battery from the appliance if you are not going to use it for some time.
- If the appliance is subjected to a major change in temperature, pressure or humidity, let the appliance acclimatise for 30 minutes before you use it.
- For hygienic reasons, the appliance should only be used by one person.

Electromagnetic fields (EMF)

This Philips appliance complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

Preparing for use

- To remove the battery compartment cover, turn it to the left until the setting indicator points to the 'open' (▼) indication. Then pull the battery compartment cover off the motor unit. (Fig. 2)

- Put the battery in the battery compartment (Fig. 3).
- Make sure the + and - poles of the battery point in the right direction.

Note: The appliance runs on one R6 AA 1.5-volt battery (included). Preferably use Philips alkaline batteries. A new AA alkaline battery has an operating time of up to 2 hours.

- Slide the battery compartment cover back onto the motor unit. Turn the cover to the right until the setting indicator points to the 'off' (0) indication (Fig. 4).

- D Make sure the sealing ring is properly placed (Fig. 5).

To avoid damage due to battery leakage:

- do not expose the appliance to direct sunlight.
- do not expose the appliance to temperatures higher than 35°C.
- remove the battery if you are not going to use the appliance for a month or more.
- do not leave an empty battery in the appliance.

Using the appliance

- Remove the protection cap by pulling it off the appliance (Fig. 6).

2 To switch on the appliance, turn the battery compartment cover to the right until the setting indicator points to the 'I' indication (Fig. 7).

3 Before you use the trimmer for the first time, test it on a small part of your arm or leg.

If any irritation or allergic reaction occurs, discontinue use immediately. Do not use the trimmer on sensitive or irritated skin.

4 Trim your nose hair, ear hair, neck hair or eyebrows as described in the rest of this chapter.

5 To switch off the appliance, turn the battery compartment cover to the left until the setting indicator points to the '0' indication (Fig. 8).

6 Put the protection cap back onto the cutting element after use to prevent damage.

Trimming nose hair

Make sure your nostrils are clean.

- Carefully insert the cutting element into one of your nostrils.

Do not insert the cutting element more than 0.5cm into your nostrils.

- Slowly move the appliance around to remove all unwanted hairs in your nostrils (Fig. 9).

Trimming ear hair

Make sure your outer ear channels are clean and free from wax.

- Slowly move the cutting element along the rim of the ear to remove hairs that stick out beyond the rim (Fig. 10).

- Insert the cutting element into the outer ear channel.

Do not insert the cutting element more than 0.5cm into your ear channel, as this could damage the eardrum.

- Slowly turn the appliance around to remove all unwanted hairs from your outer ear channel (Fig. 11).

Trimming neck hair

- Place the cutting element gently on the skin and move the appliance slowly over the skin against the direction of hair growth. (Fig. 12)

Trimming eyebrows

With the short and long eyebrow combs, you can use the appliance to trim your eyebrows to a uniform hair length.

- Comb your eyebrows in the direction of hair growth (Fig. 13).

- Choose the short or long comb, depending on the desired hair length. The indications 'short' and 'long' are on the combs.

- short comb: 3mm/0.12in
- long: 5mm/0.2in

Tip: We advise you to start trimming with the long comb. If you think your eyebrows are still too long after this, use the short comb.

- Slide the eyebrow comb onto the cutting element.

Make sure that the eyebrow comb has been properly slid into the grooves on both sides (Fig. 14).

- To switch on the appliance, turn the battery compartment cover to the right until the setting indicator points to the 'I' indication (Fig. 7).

- Move the comb over the eyebrow from the outer tip of the eyebrow towards the base of the nose (against the direction of hair growth) (Fig. 15).

Never try to trim your eyelashes. Keep the appliance away from your eyes.

Cleaning

Clean the appliance immediately after use and when a lot of hair or dirt has accumulated on the cutting unit.

Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.

The trimming head cannot be opened or detached.

- Make sure the appliance is switched off.

- Clean the cutting element with the brush supplied. Pay extra attention to the edges of the cutting element (Fig. 16).

Tip: To remove all hairs, let the appliance run briefly and then clean the cutting element with the brush again.

3 Clean the combs under the tap.

4 Switch on the appliance.

5 Rinse the cutting element under the tap with hot water (Fig. 17).

6 Switch off the appliance and let it dry.

Do not tap on the cutting element.

Do not use any sharp objects to clean the cutting element.

Note: The appliance does not need any lubrication.

Replacement

If the eyebrow combs are damaged or worn, always replace them with original Philips eyebrow combs, which are available from authorised Philips service centres.

The cutting element cannot be replaced. If the cutting element is damaged or worn, you must discard the whole appliance (see chapter 'Environment') and replace it with a new one.

Environment

- Batteries contain substances that may pollute the environment. Remove the battery when it is empty or when you discard the appliance. Do not throw away the battery with the normal household waste, but hand it in at an official collection point (Fig. 18).

- Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment (Fig. 19).

Guarantee and service

If you need service or information or if you have a problem, please visit the Philips website at www.philips.com or contact the Philips Consumer Care Centre in your country (you find its phone number in the worldwide guarantee leaflet). If there is no Consumer Care Centre in your country, go to your local Philips dealer.

Guarantee restrictions

The guarantee becomes invalid when the appliance is not used and/or not maintained properly or when it is damaged by dropping.

Troubleshooting

This chapter summarises the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, contact the Consumer Care Centre in your country.

Problem	Possible cause	Solution
The appliance becomes hot during use.	The cutting element is dirty.	Soak the cutting element of the nose trimmer in a bowl with water and some washing-up liquid for 2 minutes. Then rinse the cutting element with fresh water and let it dry. Clean the cutting element after every trimming session.
The appliance does not work.	The battery is empty.	Replace the battery by a new one (see chapter 'Preparing for use').
The cutting element is dirty.	Soak the cutting element of the nose trimmer in a bowl with water and some washing-up liquid soap for 2 minutes. Then rinse the cutting element with fresh water and let it dry. Clean the cutting element after every trimming session.	

Problem	Mögliche Ursache	Lösung
Das Gerät wird während des Gebrauchs heiß.	Das Schneideelement ist verschmutzt.	Legen Sie das Schneideelement des Nasenhaartrimmers für ca. 2 Minuten in warmes Wasser mit etwas Spülmittel. Spülen Sie das Schneideelement mit frischem Wasser aus, und lassen Sie es trocknen. Reinigen Sie das Schneideelement nach jedem Gebrauch.
Das Gerät funktioniert nicht.	Der Akku ist leer.	Legen Sie eine neue Batterie ein (siehe Kapitel "Für den Gebrauch vorbereiten").
	Das Schneideelement ist verschmutzt.	Legen Sie das Schneideelement des Nasenhaartrimmers für ca. 2 Minuten in warmes Wasser mit etwas Spülmittel. Spülen Sie das Schneideelement mit frischem Wasser aus, und lassen Sie es trocknen. Reinigen Sie das Schneideelement nach jedem Gebrauch.

Problema	Possible causa	Solución
El elemento de corte está sucio.		Sumerja el elemento de corte del recortador para nariz en un recipiente con agua y detergente líquido durante dos minutos. A continuación, enjuague el elemento de corte con agua fría y déjelo secar. Limpie el elemento de corte después de cada uso.

Problème	Cause possible	Solution
L'appareil ne fonctionne pas.	La batterie est vide.	Remplacez la batterie (voir le chapitre « Avant utilisation »).
Le bloc tondeuse est sale.		Plongez le bloc tondeuse de la tondeuse nez dans un bol contenant de l'eau savonneuse pendant 2 minutes. Rincez-le ensuite à l'eau claire et laissez-le sécher. Nettoyez le bloc tondeuse après chaque utilisation.

Probleem	Mogelijke oorzaak	Oplossing
----------	-------------------	-----------

Het knipelement is vuil.

Leg het knipelement van de neustrimmer 2 minuten in een kom met water en een beetje afwasmiddel. Spoel het knipelement af met schoon water en laat het opdrogen. Maak het knipelement na elke trimbeurt schoon.

Problema	Causa provável	Solução
----------	----------------	---------

O acessório de corte está sujo.

Mergulhe o acessório de corte do aparador para o nariz numa taça com água e um pouco de detergente para a louça durante 2 minutos. Em seguida, enxágüe o acessório de corte com água limpa e deixe secar. Limpe o acessório de corte após cada sessão de utilização.